


//PK1 PRO Streamer YP

Cage for YoloBox Pro

Assembly Instructions

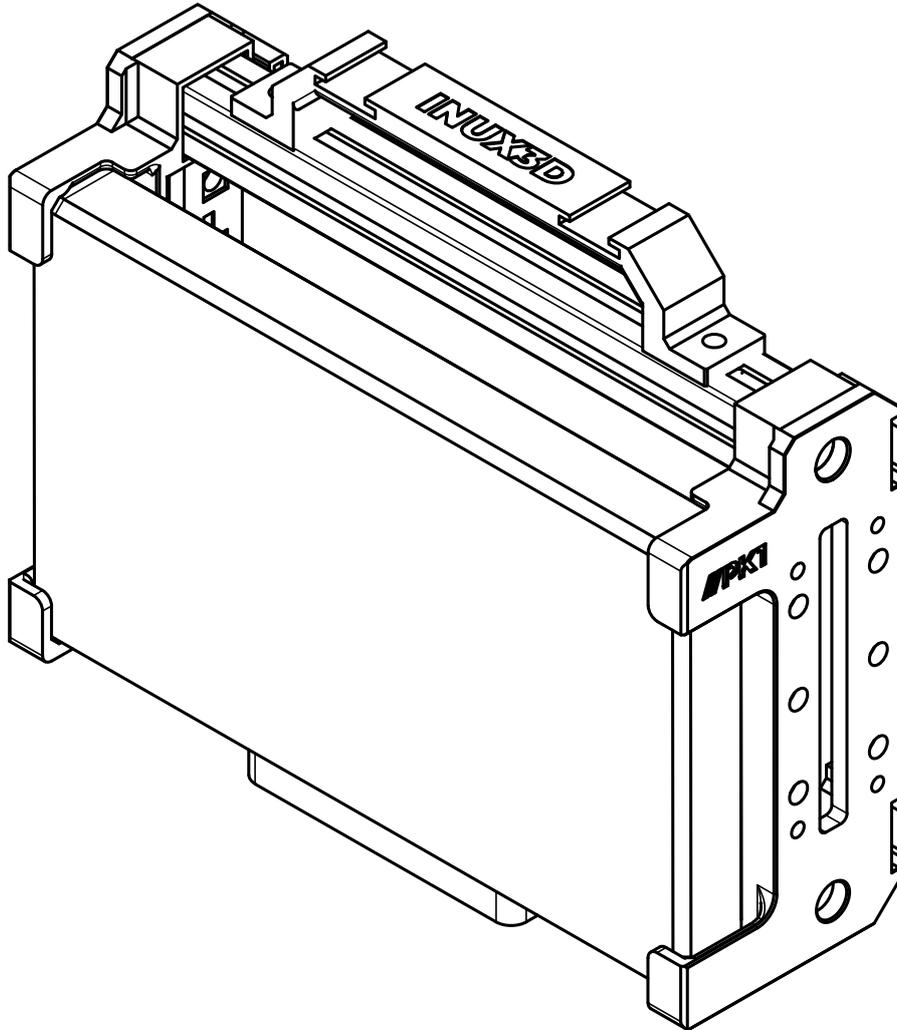

Parts of this product were produced with an additive manufacturing process. Minor surface imperfections do not affect the overall product functionality.

INUX Cloud s.r.o.
Galvaniho 12B
Bratislava 82104
Slovakia

<https://shop.inux3d.com>
sales@inux3d.com

INUX3D[®]
ADDITIVE MANUFACTURING




Biodegradable according
to DIN EN ISO 14855


MADE IN EU

PK1 PRO STREAMER YP


Assembly Instructions Page 2 of 5

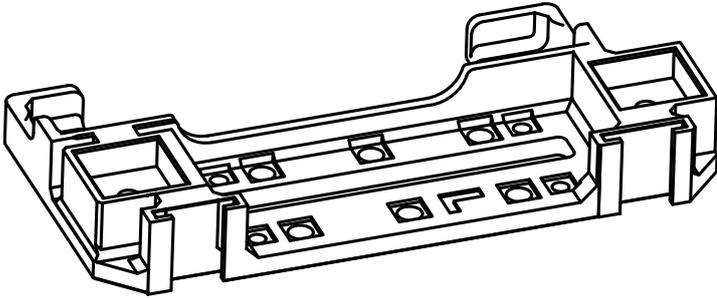

Begin by placing the left side of the YP Cage smooth side down with the cold shoes facing you
The left side is indicated by the 'L' embedded in the part
You are looking at the left rear of the YP cage

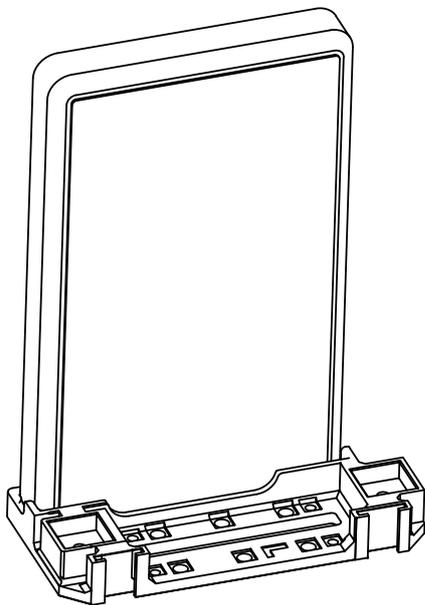

Place your YoloBox Pro into the side of the cage so that the screen is facing away from you
You must now choose the final orientation of your YoloBox Pro so the HDMI cables point up (to the right in this image) or down (to the left in this image)

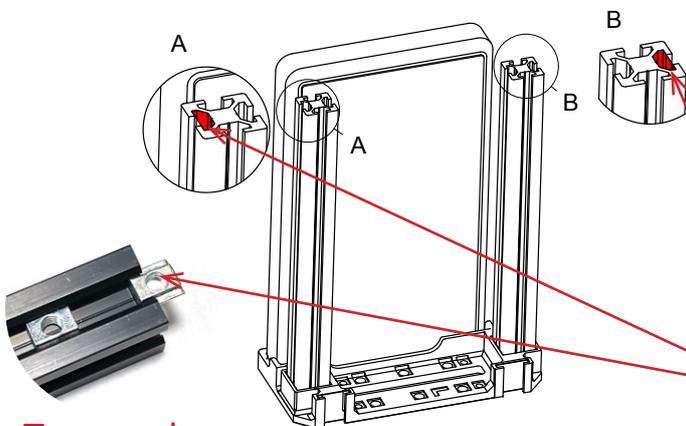

Example

Insert the 2 aluminium bars into the corresponding spaces in the YP cage

Important:


Slide 2x M5 sliding T-Nuts for the handle here

Slide 2x M5 sliding T-Nuts for the CheeseBar tripod mount here

* Please note that your kit comes with extra M4 and M5 nuts and bolts so you can attach other accessories you may already have

PK1 PRO STREAMER YP


Assembly Instructions Page 3 of 5

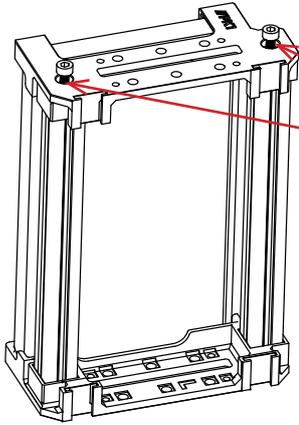

Place the right side of the YP cage over the top of the YoloBox Pro and the 2 aluminium bars

Drop in two of the supplied M5x10mm bolts, into the holes to affix the right side of the YP cage onto the aluminium bars


These only need to be lightly tightened. You will damage the plastic sides if you tighten with force

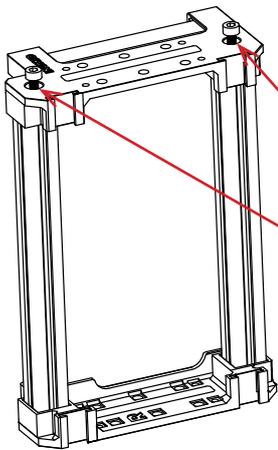

Place your hand underneath the left side which is currently at the bottom

Flip the entire YP cage over while pressing the sides together so the left side is now on top

Drop in 2 more M5x10mm bolts into the holes and lightly tighten

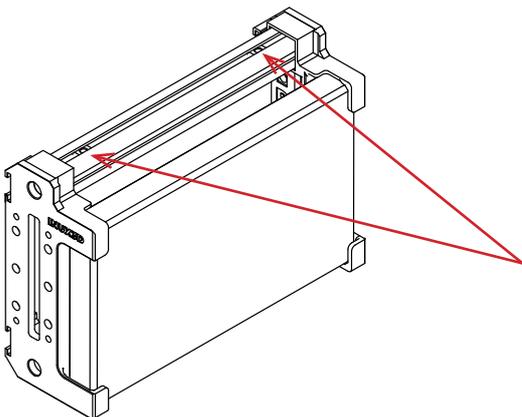


Position the YP cage as shown and note the 2x M5 slide in nuts you dropped in earlier

We will be attaching the top handle to these two T-nuts

PK1 PRO STREAMER YP


Assembly Instructions Page 4 of 5

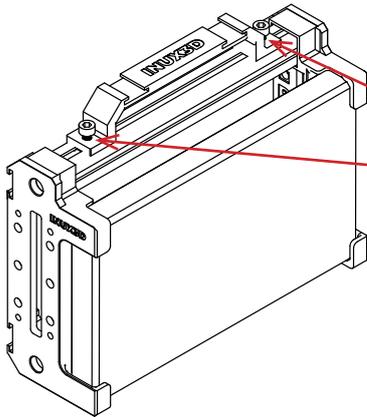

Place the handle on top of the YP cage and **very loosely tighten** the 2x M5x10 bolts into the T-nuts

Now that you have both bolts attached, slide the handle left or right to centre it


You may now tighten the bolts

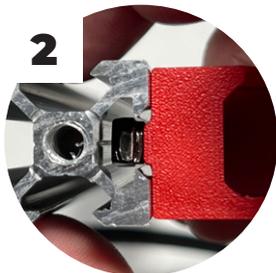

Attaching the cable managers requires the use of an M4x8mm bolt through the cable manager and into an M4 drop in nut.

Note that the nut fits into the slot of the aluminium bar


1. Place the bolt through the cable manager hole and very loosely into the drop in nut
2. Position the drop in nut so that it fits into the slot of the bar
3. Tighten the bolt so the drop in nut turns and locks into place at the position you require

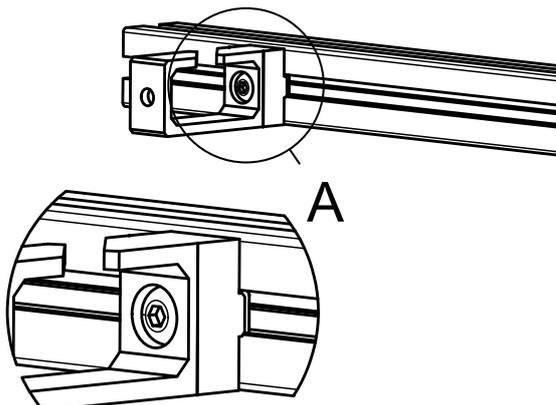


This is simply a zoomed in view of how a cable manager assembly should look once attached

PK1 PRO STREAMER YP

Assembly Instructions Page 5 of 5

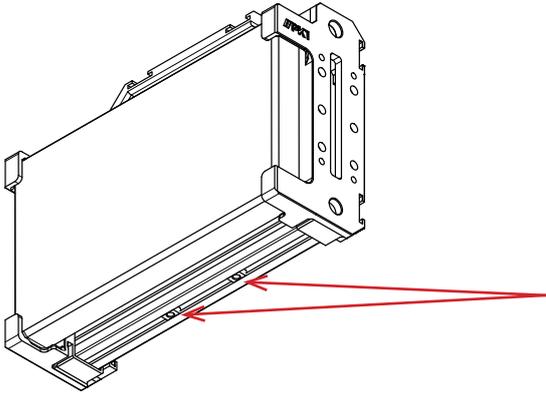


Attaching the cheesebar is like the handle and utilises the two slide in nuts we inserted earlier
We will attach bolts to the two T-nuts that are visible here

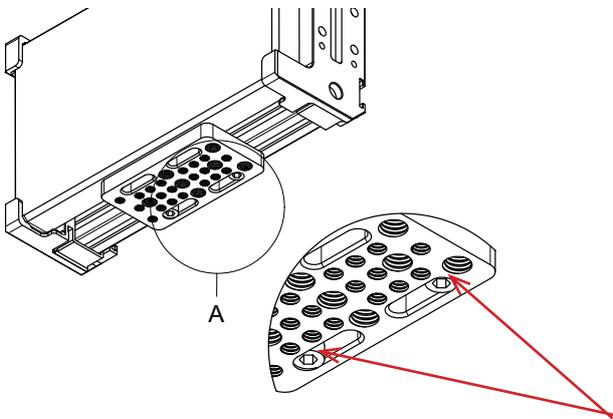

Using 2x M5x8mm bolts, we will **lightly attach** the cheesebar to the slide in T-nuts


Once both bolts are attached to the nuts, slide the cheesebar so that it is centred along the aluminium bar

You may now tighten the bolts

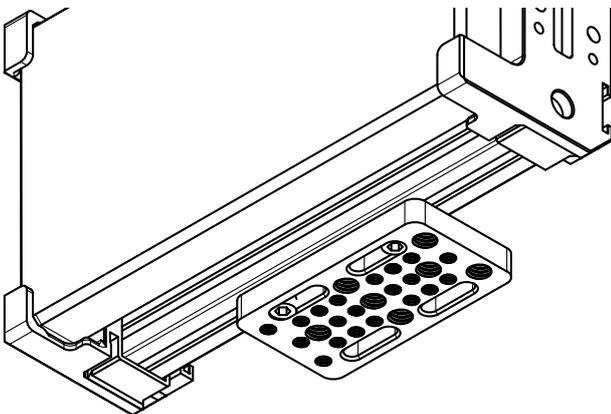

In the event you place your YoloBox Pro such that the HDMI cables are pointing downwards, position the cheesebar so it only covers the aluminium bar and not the YoloBox Pro.

The HDMI cables will now be clear of the cheesebar

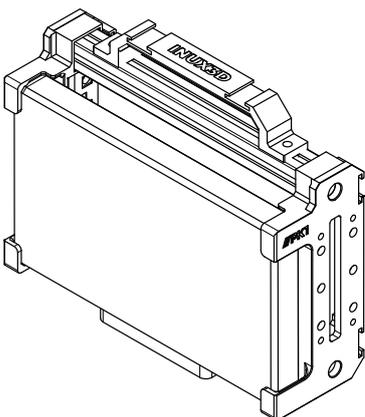

Congratulations on completing the assembly of your PK1 Pro Streamer YP