

## Zero Pi Case


Insert screws from bottom

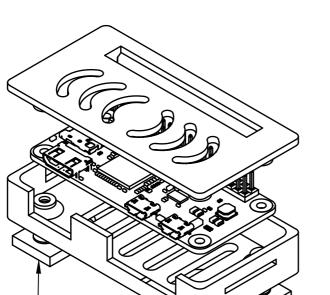

First place the Pi inside the base and align the moutning holes

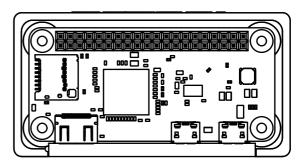

Then place the top part and flip it to expose the bottom. Place the bottom clips in the desired orientation for desktop or wall mount and insert the mounting screws.

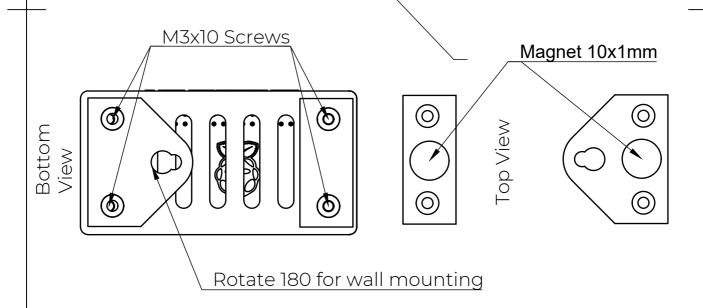

| Dept.                   | Technical reference | Created by    |                     | Approve | ed by           |       |  |
|-------------------------|---------------------|---------------|---------------------|---------|-----------------|-------|--|
| Tech                    | Drawing             | LL            | 9/2/2020            |         |                 |       |  |
| INUX3D<br>design studio |                     | Document type | Document type       |         | Document status |       |  |
|                         |                     | Assembly & I  | Assembly & Mounting |         | FINAL           |       |  |
|                         |                     | Title         |                     | DWG No. |                 |       |  |
|                         |                     | Pi Zero       | Pi Zero<br>Drawing  |         | v3              |       |  |
|                         |                     | Drawing       |                     |         |                 |       |  |
|                         |                     |               | la la .             | Rev.    | Date of issue   | Sheet |  |
|                         |                     | & Assem       | DIY                 | v16     | 2/Sept/2020     | 1/1   |  |